

28860 Adapter Kit

Installation Instructions

PLUG-IN HARNESS INSTALLATION

Follow the 8436 Harness Kit Isolation Module Light System instructions until directed to use these adapter kit instructions.

NOTE: Both of the plug-in harnesses must be configured for HB-5 headlamps (9007).

PLUG-IN ADAPTER INSTALLATION


Removal of the vehicle grille and turn signal lamp housings will be necessary.

Grille Removal

1. Remove the screw in the front of the grille just below the Mitsubishi emblem.
2. The grille is held in place by plastic push-in tabs. Starting at one side and working toward the other, gently pull the grille outward, freeing the plastic tabs and separating the grille from the vehicle.

Turn Signal Lamp Housing Removal

1. On one side of the vehicle, open the door and locate the turn signal bulb socket. Twist and remove the socket and bulb.
2. Locate the two mounting screws securing the turn signal lamp housing (one above and one below the turn signal bulb socket). Loosen both screws until they spin freely. You do not need to completely remove the screws.
3. Close the door taking care not to damage the turn signal bulb or socket.
4. Remove the turn signal lamp housing by carefully sliding it to the outside, away from the grille.
5. Repeat on the opposite side of the vehicle.

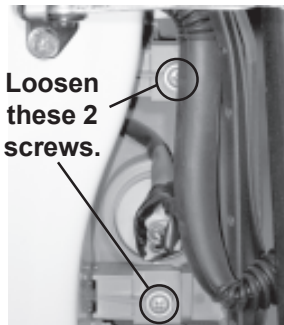

Turn Signal Taps

1. Locate the vehicle turn signal wire. Splice the purple wire from the plug-in harness into the vehicle turn signal wire following the recommended splicing procedure found in the 8436 Harness Kit Isolation Module Light System instructions. Trimming the turn signal harness covering may be necessary.
2. Repeat on the opposite side of the vehicle.

Plug-In Adapters

1. Locate the vehicle headlamp housing connector on one side of the vehicle (top center of the housing).
2. While pressing the connector release tab, gently pull outward to remove the connector.
3. Plug the female end of the adapter into the vehicle headlamp housing.

NOTE: The adapter with the brown park wire must be connected to the short plug-in harness and should be used on the side of the vehicle closest to the Isolation Module.

4. Plug the male end of the adapter into the female connector removed from the headlamp housing.
5. Route the remaining adapter connectors toward the center of the vehicle, and connect the adapter to the plug-in harness.
6. Repeat Steps 1–5 on the opposite side of the vehicle.
7. Splice the brown adapter wire to the brown wire on the short plug-in harness following the recommended splicing procedure.

NOTE: Only the short plug-in harness connects to the vehicle parking light circuit.

8. Tuck in the adapters on top of the headlamp housings, and cable tie the adapters to the vehicle headlamp harnesses as needed.
9. Reinstall the turn signal housing and grille.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.