


NOTE: Overtightening terminal attaching nuts may cause seal failure, resulting in premature failure of this relay.


NOTE: Position motor relay terminals up, horizontal or in between.

Torques
Small Terminals – Maximum 15 in-lb.
Large Terminals – Maximum 35 in-lb.

For Cable-Operated Hydraulic Units:

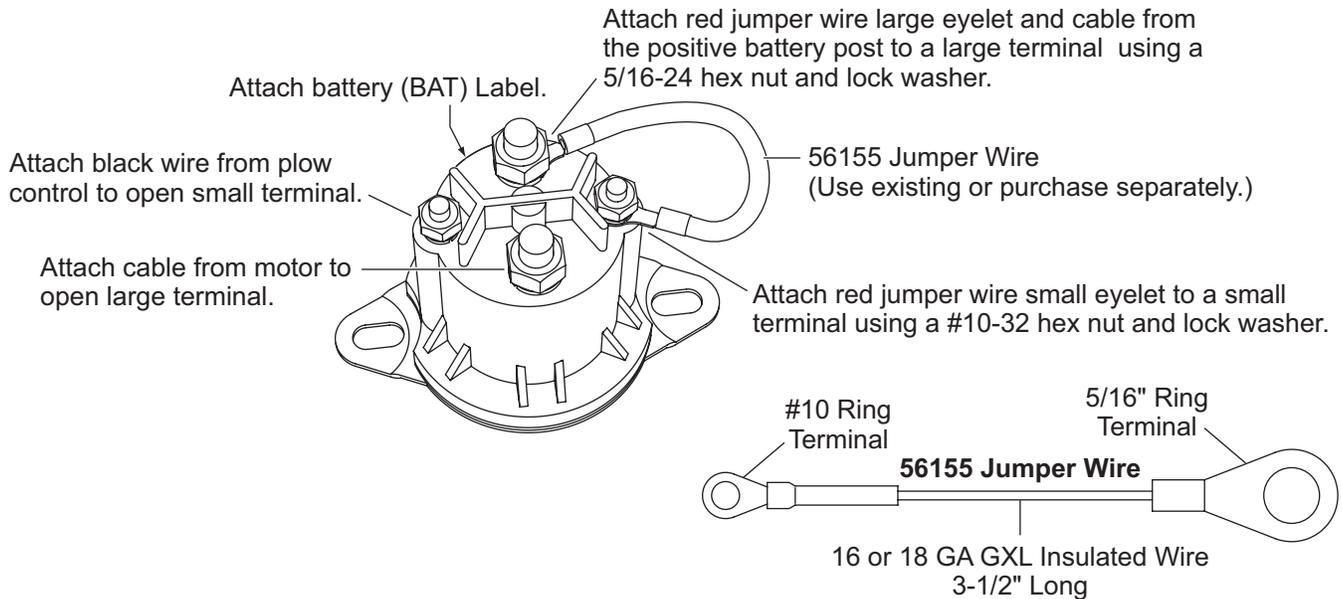

For ICE BREAKER™ Spreaders (Operates as a Starter Relay):

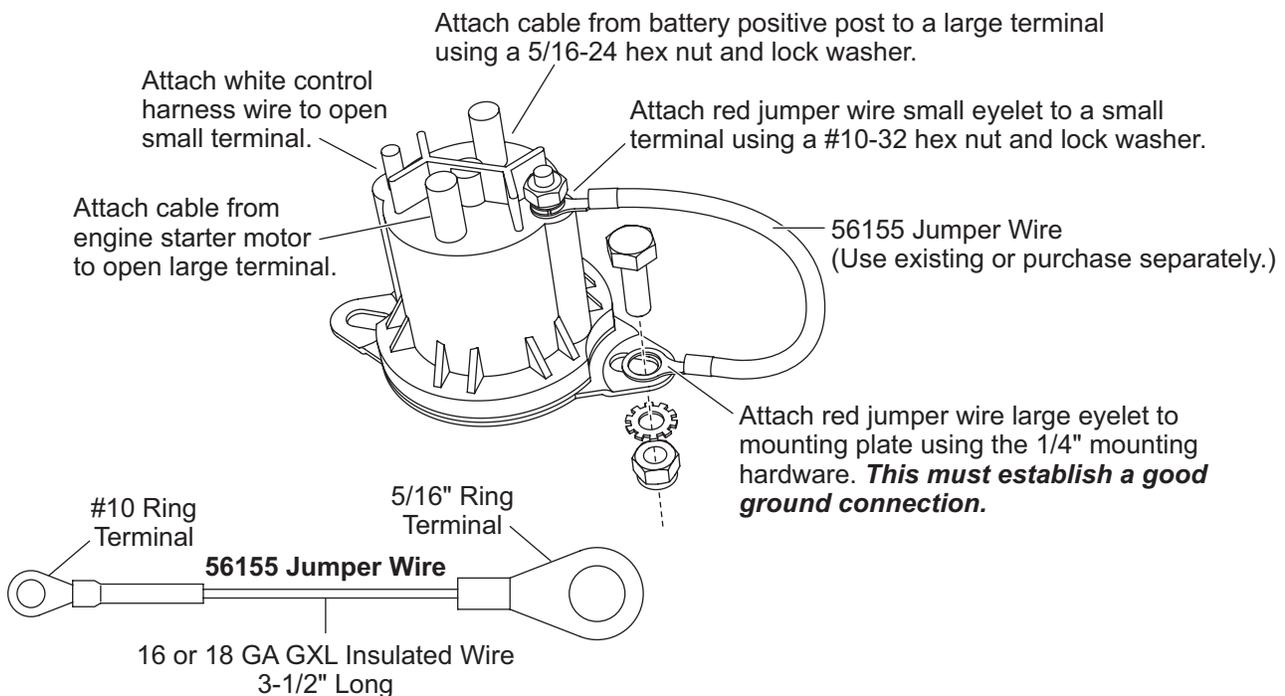

NOTE: Overtightening terminal attaching nuts may cause seal failure, resulting in premature failure of this relay.


NOTE: When using the 56131K-1 Motor Relay Kit for solenoid control hydraulic power units, **DO NOT** attach the jumper wire. Attaching the jumper wire will damage the vehicle wiring harness.

Torques
Small Terminals – Maximum 15 in-lb.
Large Terminals – Maximum 35 in-lb.


NOTE: Position motor relay terminals up, horizontal or in between.

For Solenoid Hydraulic Units:

Straight Blade and MVP® Snowplows

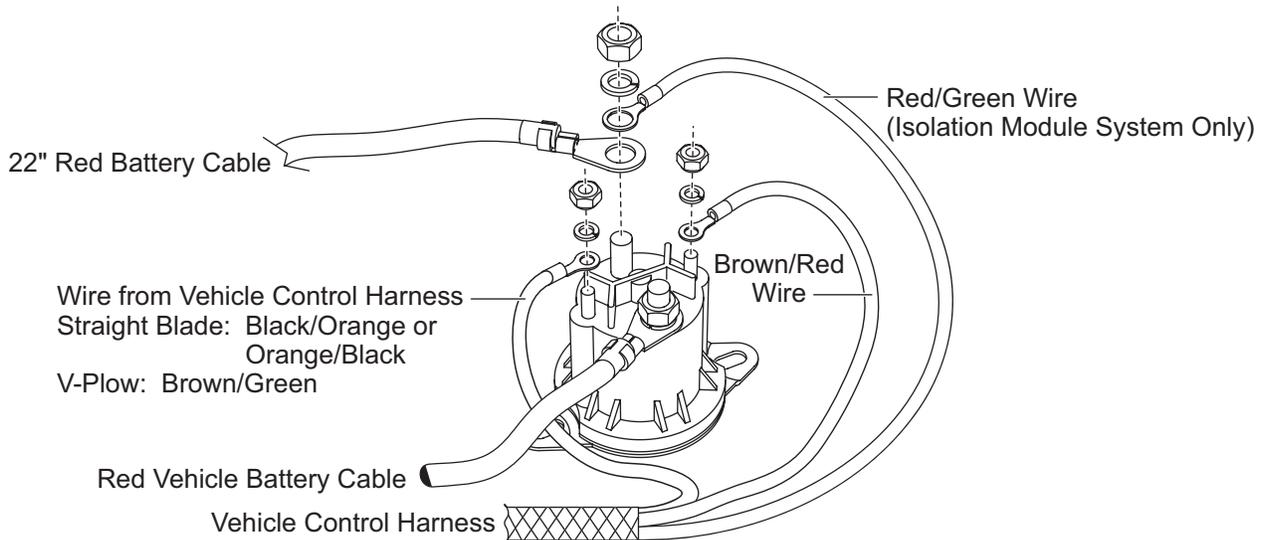

MVP PLUS™ or WIDE-OUT™ Snowplows

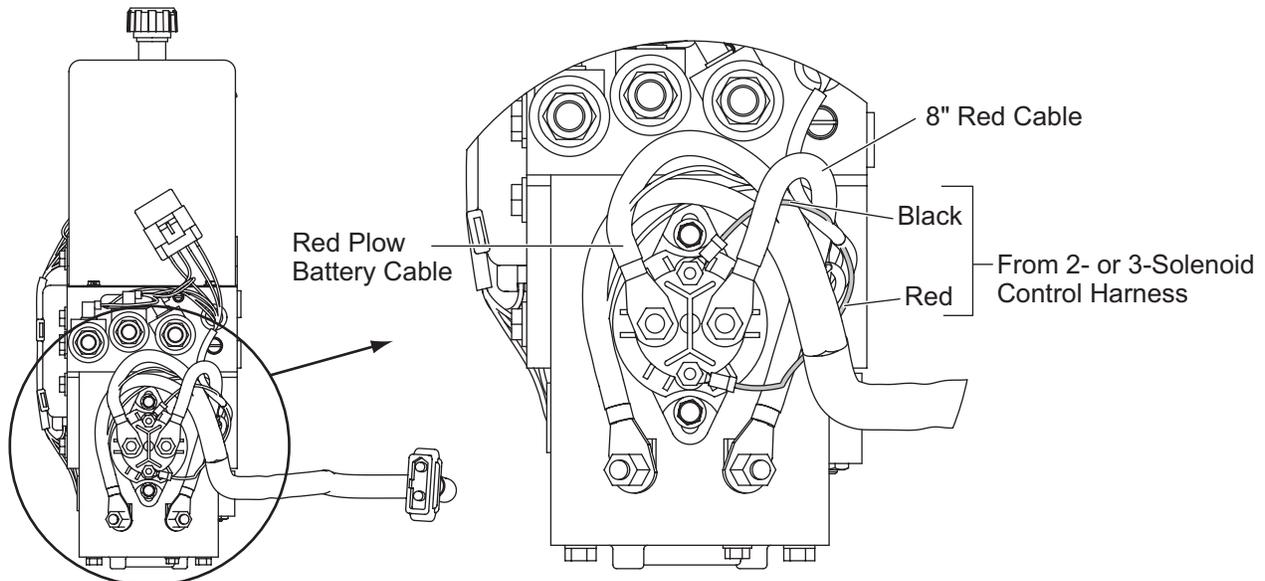

Western Products reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. Western Products or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. Western Products offers a limited warranty for all snowplows and accessories. See separately printed page for this important information. The following are registered (®) or unregistered (™) trademarks of Douglas Dynamics, L.L.C: ICE BREAKER™, MVP®, MVP PLUS™, WESTERN®, WIDE-OUT™.