


BAFFLE REPLACEMENT INSTRUCTIONS

June 9, 1999
Form No. 68819

1. Grind off the old baffle and hinge from the chute assembly.
2. Align the new baffle and clamp it in place.
3. Using the new hinge as a template, drill two 11/32" holes in the chute.
4. Install the baffle with the supplied hardware and remove the clamps.
5. Repaint as required.

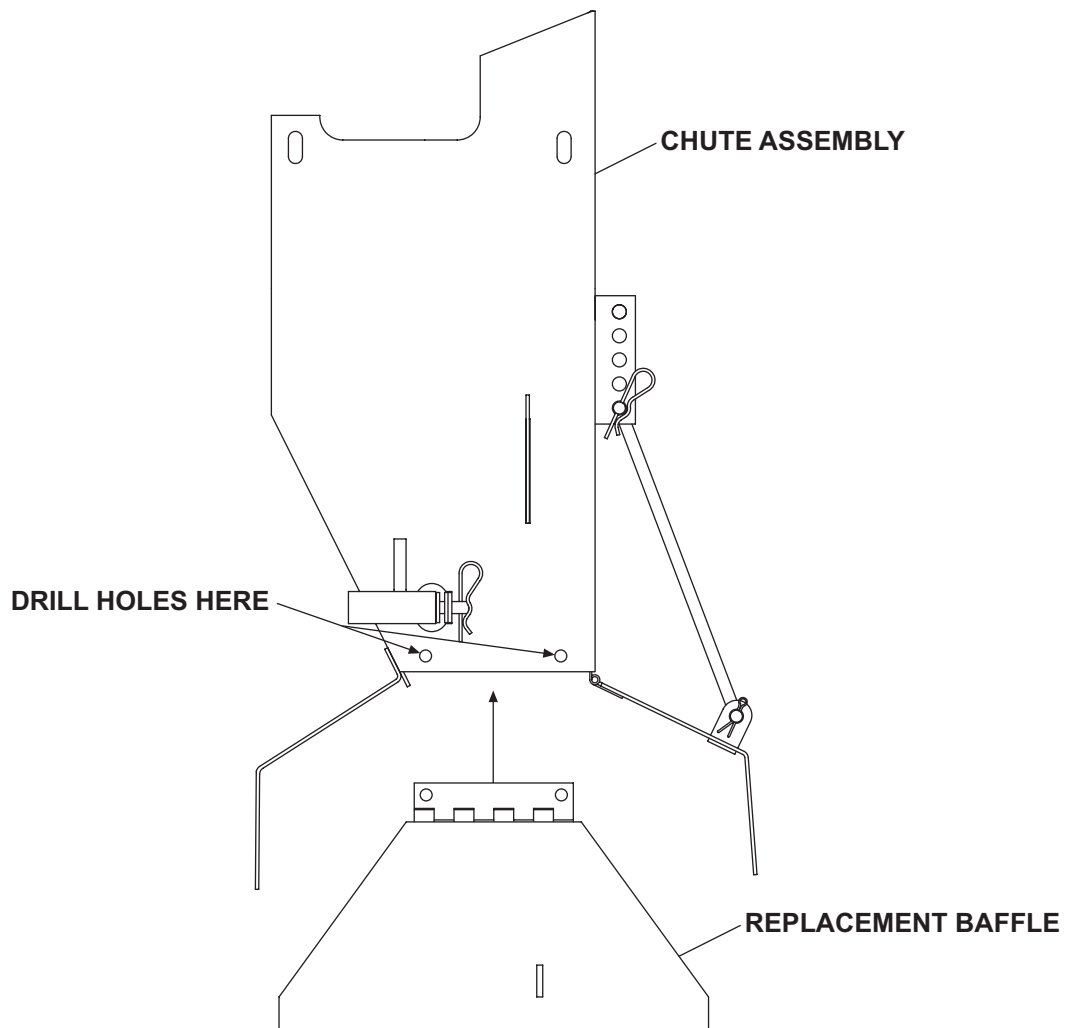

Copyright© 1999 Douglas Dynamics, L.L.C. All rights reserved. This material may not be reproduced or copied in whole or in part, in any printed mechanical, electronic, film or other distribution and storage media, without written consent of the company. Authorization to photocopy items for internal or personal use by the company's outlets is granted.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used herein.