


DISASSEMBLY INSTRUCTIONS

⚠ CAUTION
 Read this document before installing the conversion kit.


⚠ CAUTION
 Use standard methods and practices when attaching spreader and installing conversion kits including proper personal protective safety equipment.

1. Remove the two fasteners securing the feed gate handle guide to the feed gate bracket. Retain fasteners.

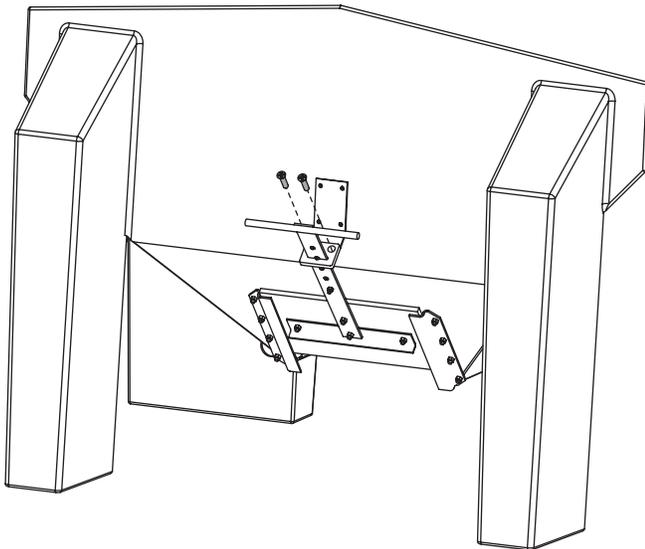

2. Completely remove the feed gate assembly from the spreader by pulling it free of the feed gate guides.


3. Remove and discard the 5 sets of #10 fasteners in the feed gate handle. These fasteners were previously used to adjust the feed gate and will no longer be needed.

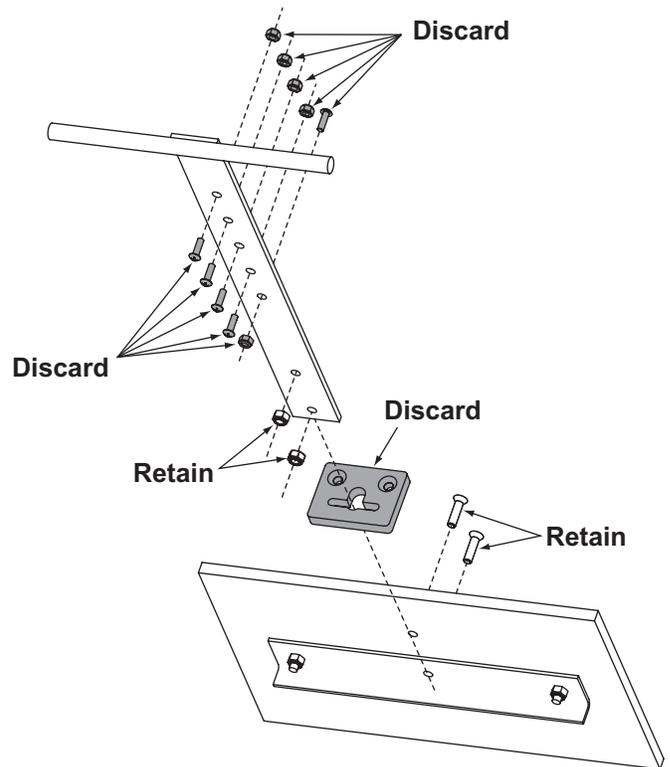


4. Remove the feed gate handle from the feed gate. Retain fasteners.
5. Remove the feed gate handle guide from the feed gate handle and discard.

REASSEMBLY INSTRUCTIONS


1. Drill out the 5 adjustment holes in the feed gate handle to 13/32".

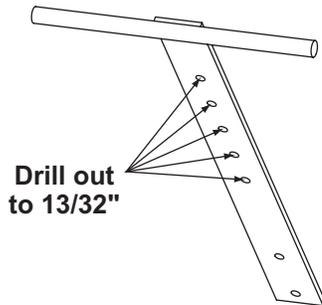

2. Slide the replacement feed gate handle guide onto the feed gate handle as shown.

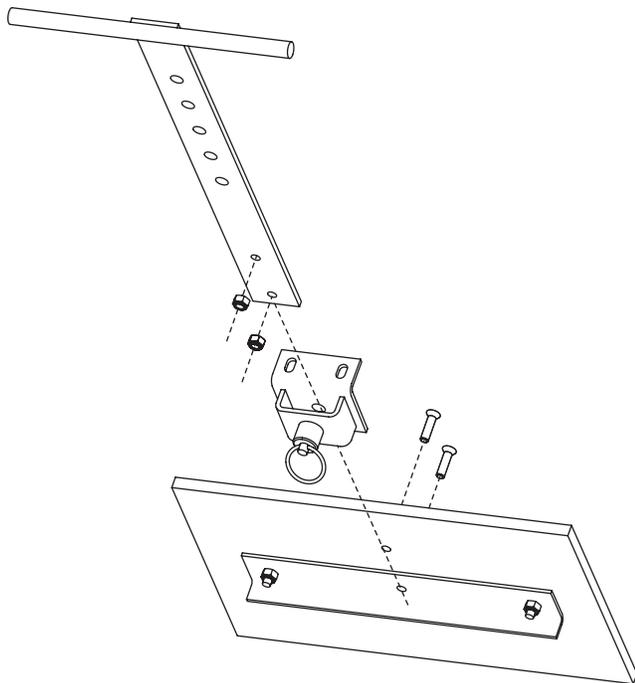

3. Reinstall the feed gate handle onto the feed gate using the original fasteners.
4. Slide the feed gate back into the feed gate guides.
5. Attach the replacement feed gate handle guide to the feed gate bracket using the original fasteners.

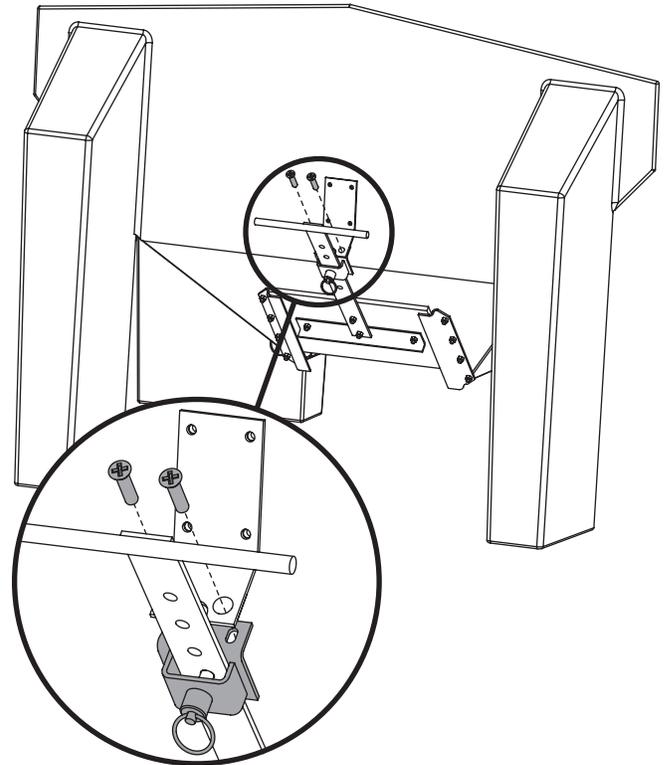

NOTE: Replacement feed gate handle guide should be installed underneath the feed gate bracket.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for spreaders. Do not exceed vehicle ratings with a spreader. The company offers a limited warranty for all spreaders and accessories. See separately printed page for this important information.