


Blade Wing Accessory Kit

UTV V-Plow Snowplows

PARTS LIST

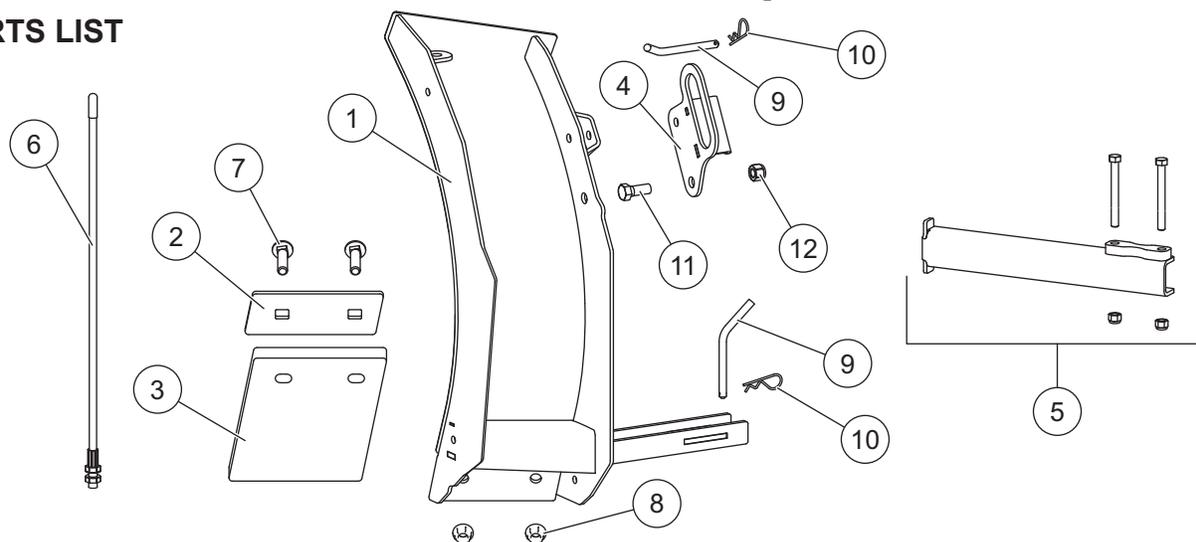

52657 Blade Wing Accessory Kit							
Item	Part	Qty	Description	Item	Part	Qty	Description
1	88901	1	Replacement Wing - DS	5	83616	1	Blade Stop Kit
ns	88902	1	Replacement Wing - PS	6	52658	1	Blade Guide Kit
2	83650	2	Bolting Bar	ns	83651	1	Cutting Edge Bolt Bag
3	83807	2	Cutting Edge	ns	88903	4	Pin Kit
4	88904	1	Wing Latch - DS	ns	88908	2	Latch Bolt Kit
ns	88905	1	Wing Latch - PS				
83651 Cutting Edge Bolt Bag							
7		4	1/2-13 x 2 Carriage Bolt G5	8		4	1/2-13 Flanged Locknut
88903 Pin Kit							
9		1	3/8 x 2-3/4 Pin	10		1	3/32 x 2-1/4 Hairpin Cotter
88908 Latch Bolt Kit							
11		1	1/2-13 x 1-1/14 Hex Cap Screw G5	12		1	1/2-13 Hex Locknut GB
ns = not shown				G = Grade			

⚠ WARNING

Do not exceed GVWR or GAWR, including blade and ballast.

⚠ CAUTION

Read this document before installing the blade wing accessory kit.

⚠ CAUTION

Use standard methods and practices when attaching snowplow and installing accessories, including proper personal protective safety equipment.

⚠ CAUTION


See your sales outlet/website for specific vehicle application recommendations before installation. The online selection tool has specific vehicle and snowplow requirements.

INSTALLATION INSTRUCTIONS

⚠ WARNING


Keep 8' clear of the blade when it is being raised, lowered or angled. Do not stand between vehicle and blade or directly in front of the blade. If the blade hits or drops on you, you could be seriously injured.

1. Park the vehicle on a smooth, level, hard surface, such as concrete. Lower the blade to the ground, and turn the control OFF. Disconnect the snowplow from the vehicle, or turn the vehicle ignition to the "OFF" position and remove the key.
2. Install the blade stops. Refer to the Blade Stop Kit Installation Instructions included with that kit.
3. With the wing latch rotated fully rearward, slide the wing I-beam into the blade tube until the wing alignment hole is in line with the blade alignment hole.

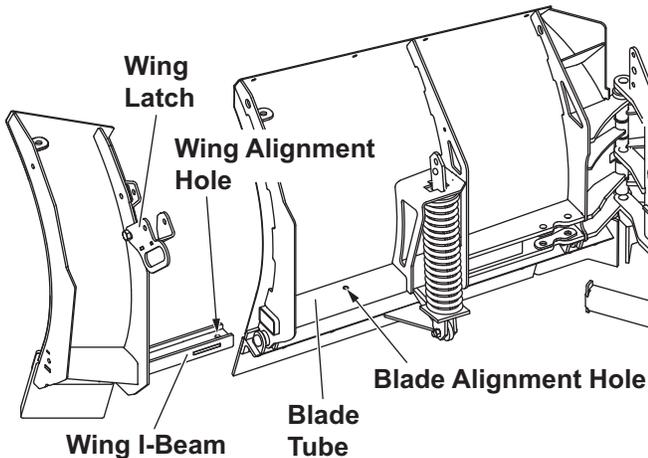

4. Insert a 3/8" pin through the blade alignment hole and wing alignment hole. Secure with a hairpin cotter.

5. Rotate the wing latch so it captures the outermost rib in the blade. Insert a 3/8" diameter pin through the wing latch and outside blade rib. Secure with a hairpin cotter.
6. Install the blade guide.
7. Repeat on opposite side.

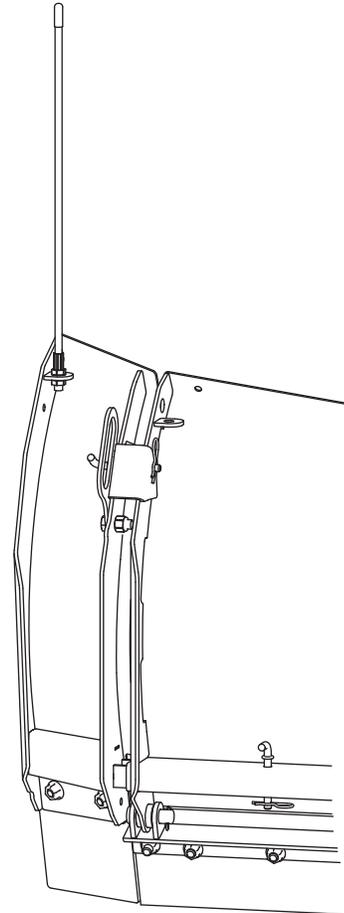

Copyright © 2016 Douglas Dynamics, LLC. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film or other distribution and storage media, without the written consent of the company. Authorization to photocopy items for internal or personal use by the company's outlets or snowplow owner is granted.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.

Printed in U.S.A.