WESTERN

WESTERN PRODUCTS

7777 NORTH 73RD STREET
P.O. BOX 23045
MILWAUKEE, WISCONSIN 53223
A DIVISION OF DOUGLAS DYNAMICS, INC.

Pro-Grip Mount Kit

INSTALLATION INSTRUCTIONS

66

The Pro-Grip Mount Kit will secure your Western® solenoid control to interior vehicle cab surfaces. Possible mounting areas may include, front or side of dash, center console, etc. Location will depend on operator preference and mounting clearance with other vehicle controls.

Once the control is properly mounted it can be easily removed and stored.

INSTALLATION:


Installation should be done at temperatures above 60 degrees fahrenheit (15.6 degrees centigrade).

- Step 1. Select area of cab where control is to be mounted. Use 4 foot long control extention #61845 if additional wire length is needed.
- Step 2. Clean installation area and surface of control with isopropyl alcohol or mineral spirits. Allow surfaces to dry for fifteen (15) minutes.

For curved mounting surfaces, pre-cut the locking strips to 2 inch length and place the strips parallel to curved surface. See diagram A.

For flat mounting surfaces, use full length locking strips mounted along the length of the control. See diagram B

Strips may be placed on the back or the side of the control.

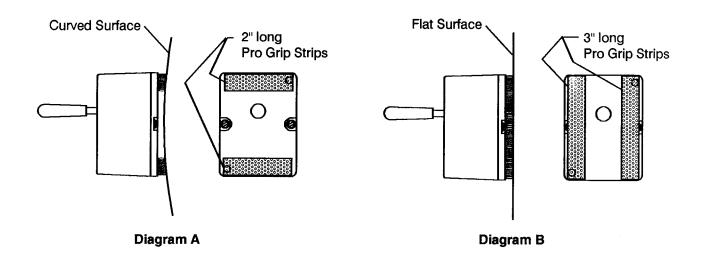

- Step 3. Once the selected surfaces are prepared, remove the adhesive back protection strip and press the locking strips into place. Apply pressure across the entire surface to work out any air bubbles which may be trapped.
- Step 4. Allow the locking strip adhesive to set for 24 hours before mounting the control to the cab surface.

The solenoid control can be easily removed by applying a sideways lifting motion to the control. Do not apply excessive force to the control. If the control does not release, gently pry up in the opening under the control with a screwdriver or other flat object.

The Pro-Grip locking strips can be removed from control and mounting location if no longer needed. Adhesive residue can be cleaned up with mineral spirits.