


**INSTALLATION INSTRUCTIONS**

This kit provides an aid for retaining the hopper spreader in the bed of a truck. Refer to the Hopper Spreader Installation Instructions for primary installation of the hopper spreader.

1. Attach the chain to the hold down eyelet of the hopper spreader with the link provided.
2. Install the hook with latch to the opposite end of the chain.
3. Insert the hook with latch into the factory tie down or a pre-installed eye bolt. (Eye bolts are not provided.)

4. Hook one end of the binder into the chain about four (4) links from the hopper eyelet. Open the binder and attach the other end into the chain at a point where, when the binder is closed, the chain is tight.
5. Repeat this procedure for each tie down.

**⚠ CAUTION**  
Binders may loosen during use. Check the tension of the chain before each use of the spreader and after 25 miles.

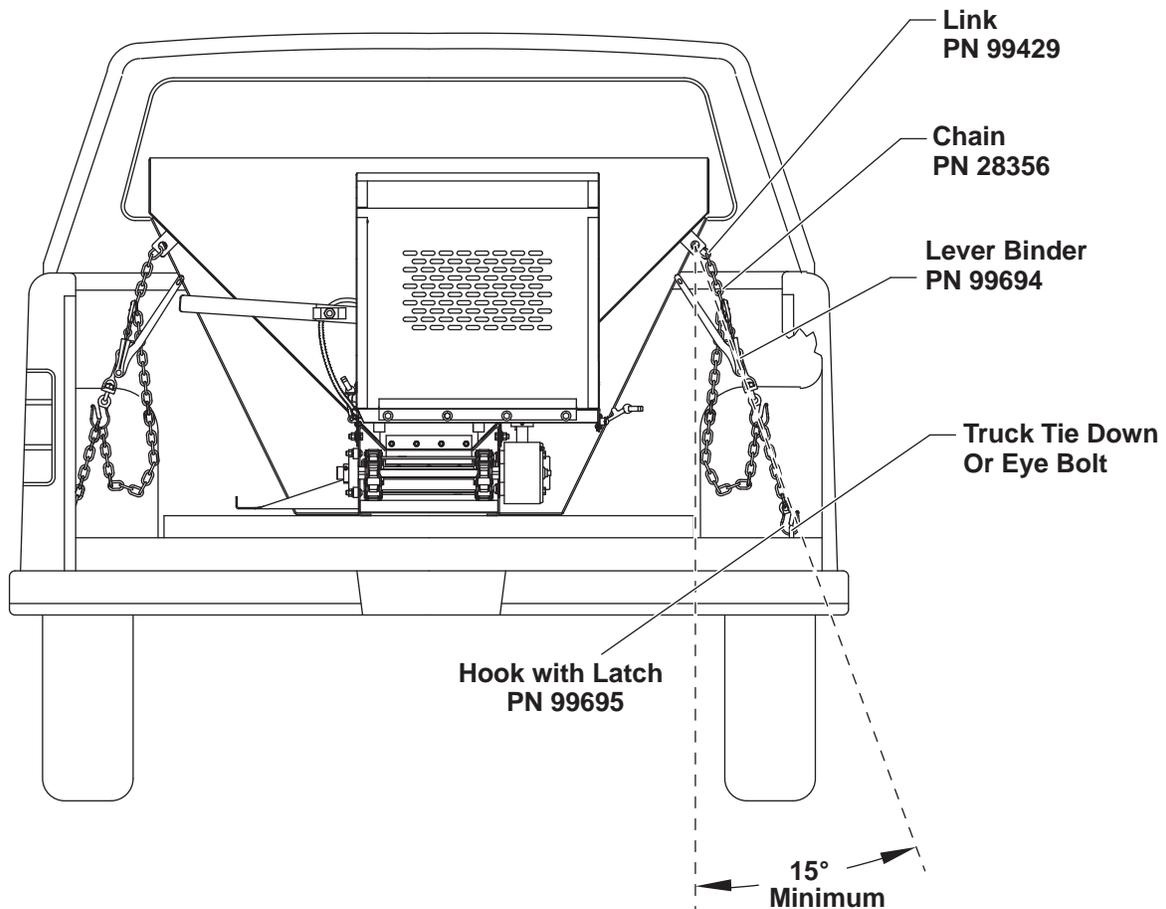

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a spreader. The company offers a limited warranty for all spreaders and accessories. See separately printed page for this important information.

**Printed in U.S.A.**

---