FORM NO. 63393 November 25, 1999



Plug-In Harness Kit

GMC All New Style Sierra K1500, K2500 **Chevy Silverado**

K1500, K2500 1999 & Later

1999 & Later

Straight Blade Kit Harness Kit No. 63392 HB 3&4 - F

MVP[®] Blade Kit

Harness Kit No. 63394 HB 3&4 - F

ACAUTION


See your WESTERN[®] outlet for application recommendations. The Selection List has specific vehicle and snowplow requirements.

	Qty. in Kit No.			Qty. in Kit No.			
Part No.	63392	63394	Description	Part No.	63392	63394	Description
61437	1		Vehicle Harness Kit 9-Pin	. 62919	2	2	Jumper Assy – 2 Way (Tan)
66610		*	Vehicle Harness Kit 12-Pin V	. 26016	2	2	Jumper Assy – 5" (Black)
26071	1	1	Plug-In Harness HB-3 & 4-F	. 26072	1	1	Harness Assy DRL Diode w/Heatsink
26013	1	1	Fuse Holder Assy	. 26114	1	1	Jumper Assy w/Diode 24.0 Inch (Red
26078	1	1	DRL Diode w/Heatsink Assy	. 61535	4	4	Relay SPDT
63395	1	1	Parts Bag Assy 63392/63394	. 59223	6	6	Cable Tie
. 21307	2	2	.250 Insulated Receptacle	61559	1	*	Parts Bag (Harness Kits U NF)
. 26115	1	1	Splice Tap 22-18 Ga.	. 61535	2	*	Relay SPDT
. 90002	1	1	1/4-20x3/4 HX CS G2 ZP	. 61548	2	*	Plug Cover
. 91101	1	1	1/4 Plain Washer TY A STD ZP	. 59224	3	*	Bullet Receptacle Connector
. 91331	1	1	1/4-20 PT HX LK Nut NYIS ZP	. 59223	8	*	Cable Tie

[•]Parts found in 66640 Headlamp Kit MVP[®]



A DIVISION OF DOUGLAS DYNAMICS, L.L.C.

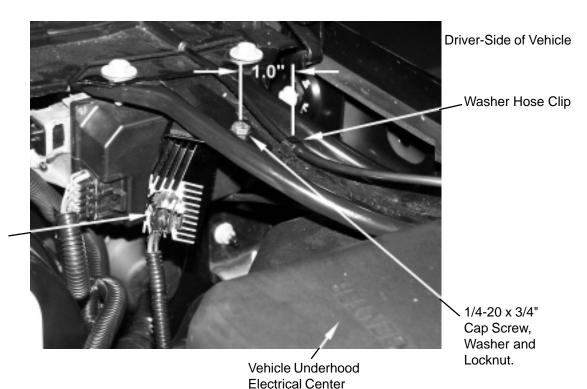


DRL Diode w/Heatsink Assy


INSTALLATION INSTRUCTIONS

- Drill a 9/32" clearance hole, 1" from washer hose clip on the center line of the support bracket. Mount DRL module as shown in illustration, using 1/4-20 x 3/4" cap screw, washer and locknut. Plug in supplied cable assembly, and route to headlamp relays. Connect red and black wire to relays as shown in schematic on following page.
- Modify the Park Lamp tap wire as shown below. Cut the brown Park Lamp tap wire approximately 10" from branch point at vehicle harness.


Strip the cut ends approximately 1/4", and install insulated receptacles.



3. Connect the receptacles to the relay as shown.

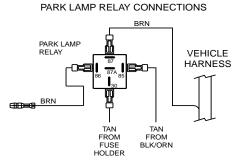

- 4. Connect the receptacles to the relay as shown on next page.
- 12-PIN MVP VEHICLE HARNESS

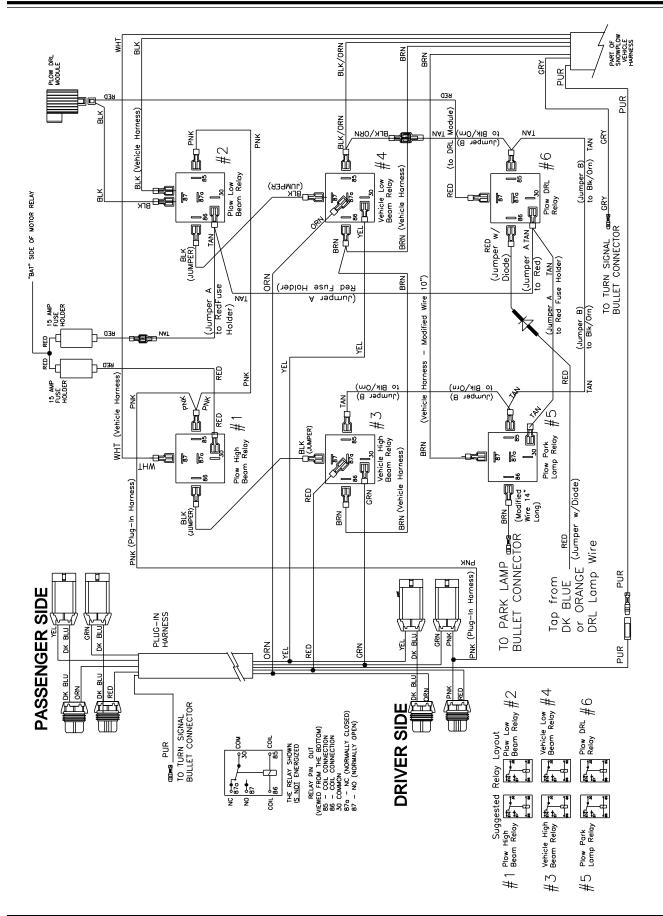



WESTERN PRODUCTS P.O. BOX 245038 MILWAUKEE, WI 53224-9538

A DIVISION OF DOUGLAS DYNAMICS, L.L.C.

Copyright© 1999 Douglas Dynamics, L.L.C. All rights reserved. This material may not be reproduced or copied in whole or in part, in any printed, mechanical, electronic, film or other distribution and storage media, without the written consent of Western Products. Authorization to photocopy items for personal use by Western Products outlets is granted.

Western Products reserves the right under its Product Improvement Policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used herein. Western Products and the vehicle manufacturer may require and/or recommend optional equipment for snow removal. Western Products offers a limited warranty on all snowplows and accessories. See separately printed page for this important information. The following are registered® trademarks of Douglas Dynamics, L.L.C.: WESTERN[®], MVP[®] and UNIMOUNT[®].

Form No. 63393