



WESTERN PRODUCTS, P.O. BOX 245038, MILWAUKEE, WI 53224-9538

 A DIVISION OF DOUGLAS DYNAMICS, L.L.C.

VEHICLE SPECIFIC ELECTRICAL PARTS LIST MODEL 1519

Chevy/GMC Light Truck 4x4
1973-1987




Blazer/Jimmy/Suburban 4x4
1973-1991

1973-1991 Harness Kit Selection Without DRL's

(See other side for vehicles with DRL's)

1973-1991 WITHOUT DRL'S		
	Straight Blade	MVP® Blade
	Dual 2B or 2D	Dual 2B or 2D
Harness Kit No.	61545	61546
Headlamp Kit No.	61540-1	66640-2
	Quad 1A & 2A	Quad 1A & 2A
	Dual 2B or 2D	Dual 2B or 2D
Harness Kit No.	61565	61566
Headlamp Kit No.	61540-1	66640-2
	Quad LF & UF	—
	Dual 2B or 2D	Dual 2B or 2D
Harness Kit No.	61580	—
Headlamp Kit No.	61540-1	—

1973-1991 WITHOUT DRL'S						
Part No.	Description	Straight Blade			MVP Blade	
		Dual	Quad	Quad	Dual	Quad
		2B or 2D 61545	1A & 2A 61565	LF & UF 61580	2B or 2D 61546	1A & 2A 61566
61438	PLOW HARNESS KIT 9-PIN	1	1	1		
66611	PLOW HARNESS KIT 12-PIN MVP				1	1
61546	PLUG-IN HARNESS 2B/2D -A	1			1	
61566	PLUG-IN HARNESS 1A & 2A -A		1			1
61581	PLUG-IN HARNESS LF & UF -A			1		
61437	VEHICLE HARNESS KIT 9-PIN	1	1	1		
66610	VEHICLE HARNESS KIT 12-PIN V				1	1
22381	BATTERY CABLE ADAPTER (SET OF 2)	1	1	1	1	1

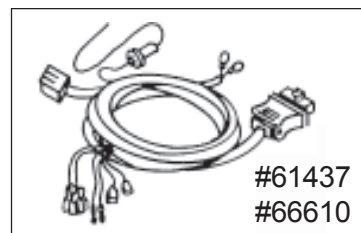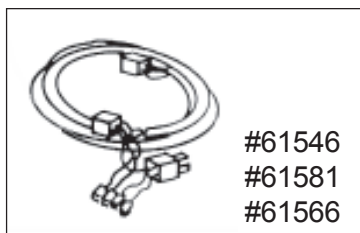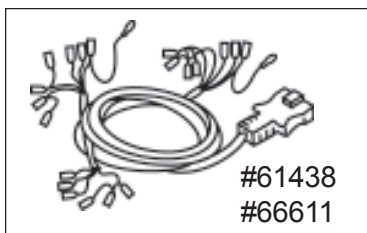

Chevy/GMC Light Truck 4x4 1973-1987 and Blazer/Jimmy/Suburban 4x4 1973-1991

1989-1991 Harness Kit Selection With DRL's

(See other side for vehicles without DRL's)




1989 through 1991 Canadian made vehicles have DRL's as standard equipment. These vehicles used a series high beam system. This system requires the use of 12-pin harnesses and headlamps in addition to the 61584 DRL Adapter Kit.

1989-1991 CANADIAN VEHICLES WITH DRL's (All require 61584 kit)		
	Straight Blade	MVP® Blade
	Dual 2B	Dual 2B
Harness Kit No.	61555	63416
Headlamp Kit No.	61550-1	61550-1
	Quad LF & UF	—
	—	—
Harness Kit No.	61560	—
Headlamp Kit No.	61550-1	—

1989-1991 With DRL's				
Part No.	Description	Straight Blade		MVP Blade
		Dual	Quad	Dual
		2B or 2D 61545	LF & UF 61560	2B 63416
61588	PLOW HARNESS KIT 12-PIN	1	1	1**
63399	PLOW HARNESS MVP SPECIAL (Hydraulics)			1
61556	PLUG-IN HARNESS 2B/2D -B	1		1
61581	PLUG-IN HARNESS LF & UF		1*	
61557	VEHICLE HARNESS KIT 12-PIN (Lighting & Hydraulics)	1	1	
63390	VEHICLE HARNESS 12-PIN SPECIAL (Lighting)			1
63401	VEHICLE HARNESS MVP SPECIAL (Hydraulics)			1
61587	1/4 FULLY INSULATED RECEPTACLE		4	
61588	1/4 FULLY INSULATED BLADE		2	
13609	LF & UF CONVERSION INSTRUCTIONS		1	
63880	1519 ELECTRICAL INSTALLATION INSTRUCTIONS			1
26270	HEAT SHRINK TUBING 1/2" x 2" LONG			1
22381	BATTERY CABLE ADAPTER (SET OF 2)	1	1	1

* Requires modification for this installation. You will need 61587 (Qty. 4), 61588 (Qty. 2), and 13609.

** Requires modification for this installation. You will need 26270 (Qty. 1) and 63880 (see page 19).

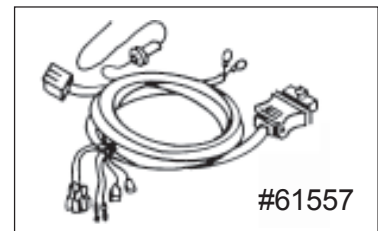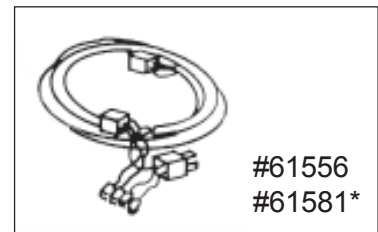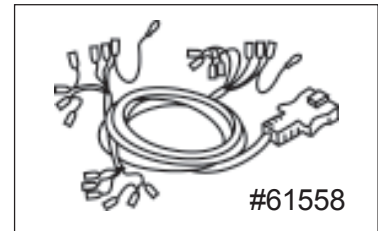

Copyright© 2004 Douglas Dynamics, L.L.C. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film or other distribution and storage media, without the written consent of Western Products. Authorization to photocopy items for internal or personal use by Western Products outlets or snowplow owner is granted.

Western Products reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. Western Products and the vehicle manufacturer may require and/or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. Western Products offers a limited warranty on all snowplows and accessories. See separately printed page for this important information. The following are registered (®) trademarks of Douglas Dynamics, L.L.C: UltraMount®, and WESTERN®.