

UTS EXTENSION KIT INSTALLATION INSTRUCTIONS


95461 (7 GA.) AND 95466 (STS)

SAFETY PROCEDURES

⚠ CAUTION

Read instructions before performing modifications. Use standard methods and practices when working on spreader including wearing proper personal protective safety equipment.

INSTALLATION INSTRUCTIONS

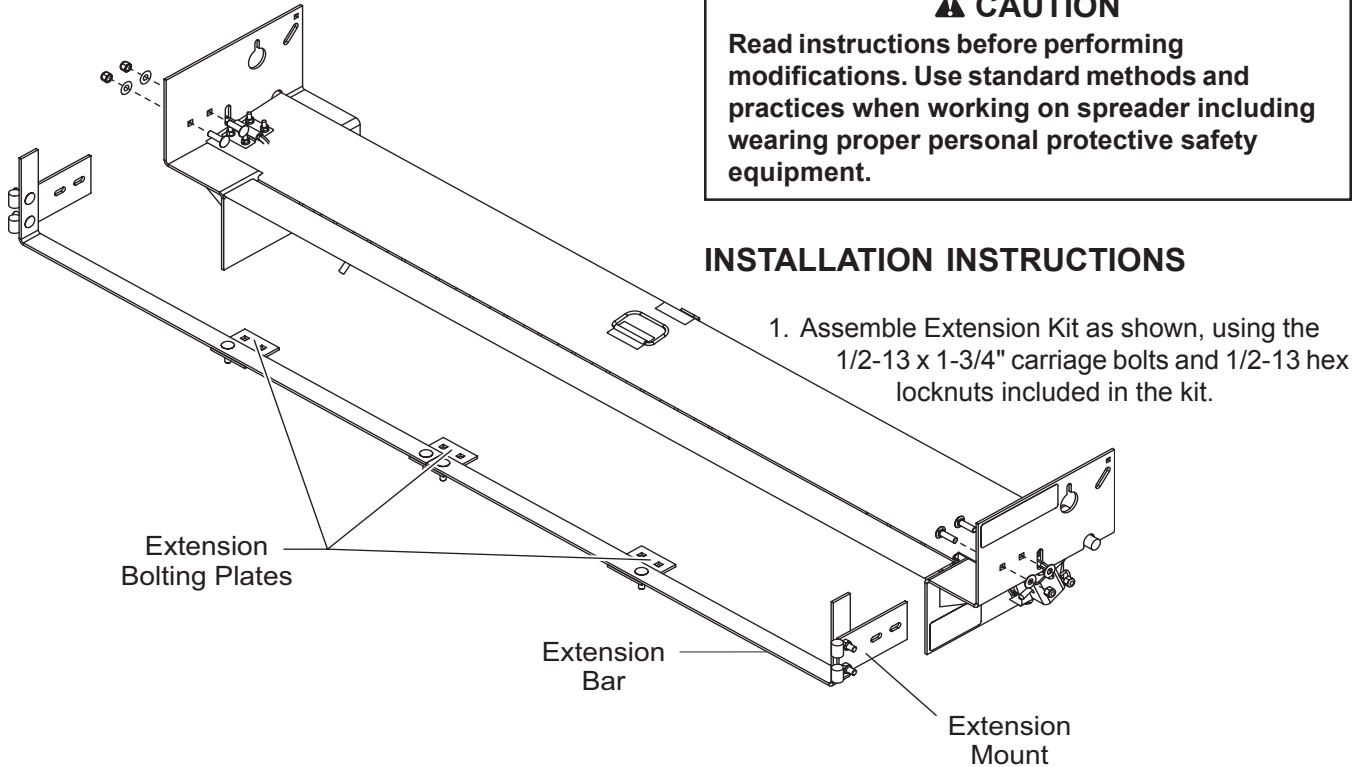


2. Fasten the assembly to spreader using hardware supplied with the UTS Mounting Kit.
3. The extension can be secured to the spreader by:
 - a. Transfer and drill four (4) 7/32" holes in spreader. Secure with 1/2-13 x 1-1/2" hex cap screws and 1/2-13 hex locknuts,

or

- b. weld extension securely to spreader.

Shown from bottom of spreader.

4. Install spreader to truck according to the spreader installation instructions.

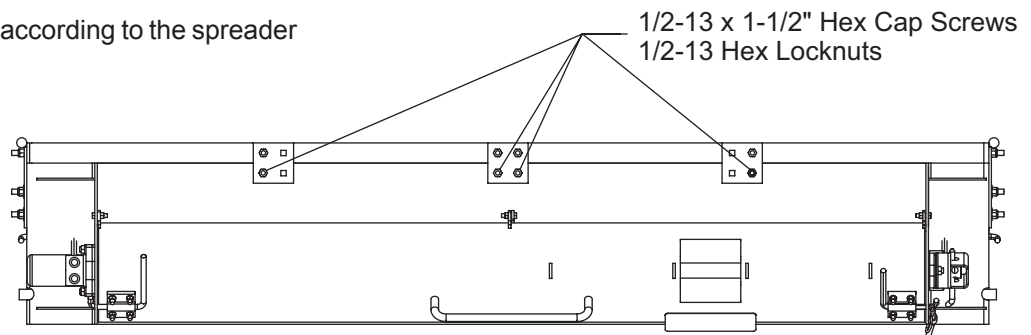

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used.