



**Installation Instructions**

1. Place the deflector on a table or workbench and drive the eight 5/16" x1" carriage bolts into the holes in the deflector. This will allow the carriage bolts to grip in the deflector. Make sure that all carriage bolts are pointing the same direction.
2. Place the adjustment rod on the back side of the deflector as shown and secure with one rod clamp and two 5/16" external tooth lock washers and two 5/16" nuts. Repeat this step for the other side of the deflector.

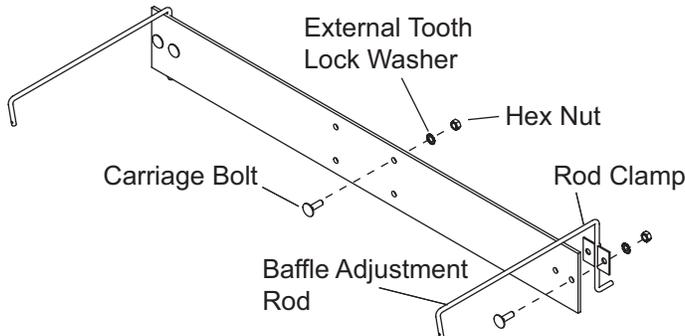

3. Place the assembled deflector on the spreader behind the spinner. The carriage bolts should be pointing toward the truck. Secure the deflector to the deflector plate with four 5/16" external tooth lock washers and four 5/16" nuts.

4. Remove the cap screws that secure the throat clamp to the spreader frame. Reinstall the throat clamp with the adjustment hoop over it as shown.

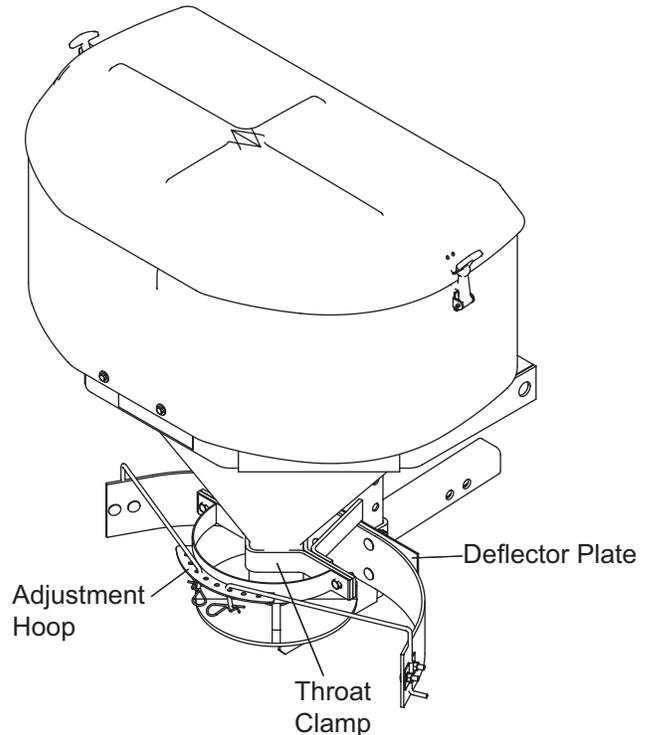

5. Insert the adjustment rods into the desired holes on the adjustment hoop and secure with the supplied hairpin cotters.

Low Profile Model 500 Deflector Kit – 95320					
Part	Qty	Description	Part	Qty	Description
95321	1	Adjustment Hoop	91959	2	3/32 x 2-1/4 Hairpin Cotter
95323	1	Deflector	90556	8	5/16 x 1 Carriage Bolt
95324	2	Baffle Adjustment Rod	91263	8	5/16 External Lock Washer
68734	2	Rod Clamp	91430	8	5/16 Hex Nut

Copyright © 2003 Douglas Dynamics, L.L.C. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film or other distribution and storage media, without written consent of the company. Authorization to photocopy items for internal or personal use by the company's outlets or spreader owner is granted.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. Do not exceed vehicle ratings with a spreader. The company offers a limited warranty for all spreaders. See separately printed page for this important information.